



Crop Type

Written By: Support

Harvesting Demo PUC

Farmobile Support
Firmware 01.32
MAC DEMOMAC5

LIVE

Export

ONLINE Startup 11:24 AM

Harvesting

Swath Width
42 feet

☒ Use machine detected swath when available

PUC Centerline Offset ?
feet Left Right

Implement Offset ?
feet Rear Front

Crop Type
Corn

☒ Use machine detected crop when available



☐ Now ☒ Startup

Save Cancel

INTRODUCTION



- Live Machine Adjustments are only available at the Machine level.
- Crop Type Adjustments are only available for Planting, Forage, and Harvest activities.
- Crop Type Adjustments carry forward to the end of the year or up to the next user entered crop type adjustment.
 - Per 'Activity' type.
 - Per PUC
- When Foraging or Harvesting, you also have the ability to 'use machine detected crop type' if available.
 - By default this will be enabled.
 - If enabled and the machine provides a machine detected crop type, that crop type will be applied to your data.
 - If disabled, you must provide a user-defined crop type.

Step 1 — Select Machines from the Farmobile DataEngineSM Menu

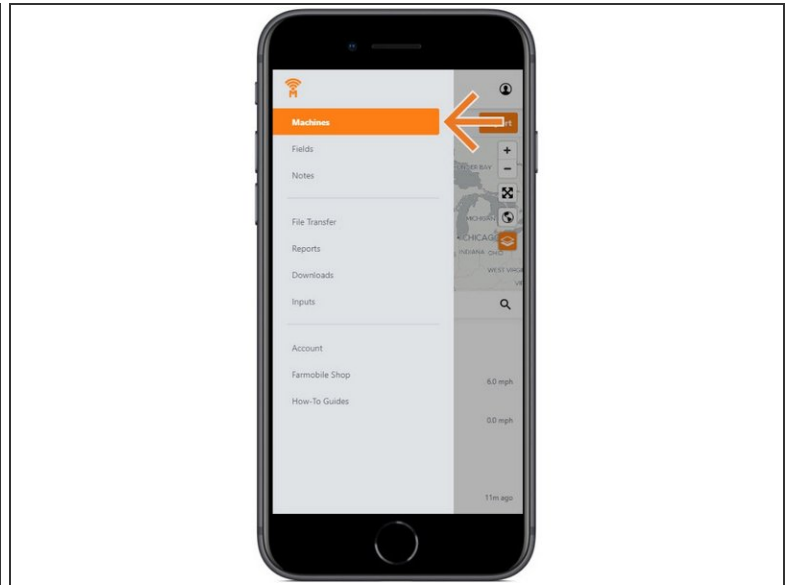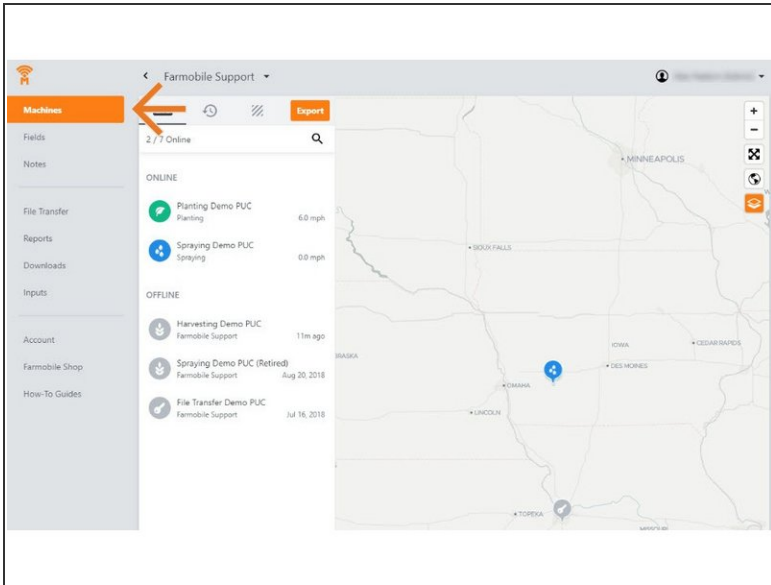



- Selecting Machines from the Farmobile DataEngine menu will open the Machines page with all of your PUCTM listed and displayed on the map.

Step 2 — Select a Machine

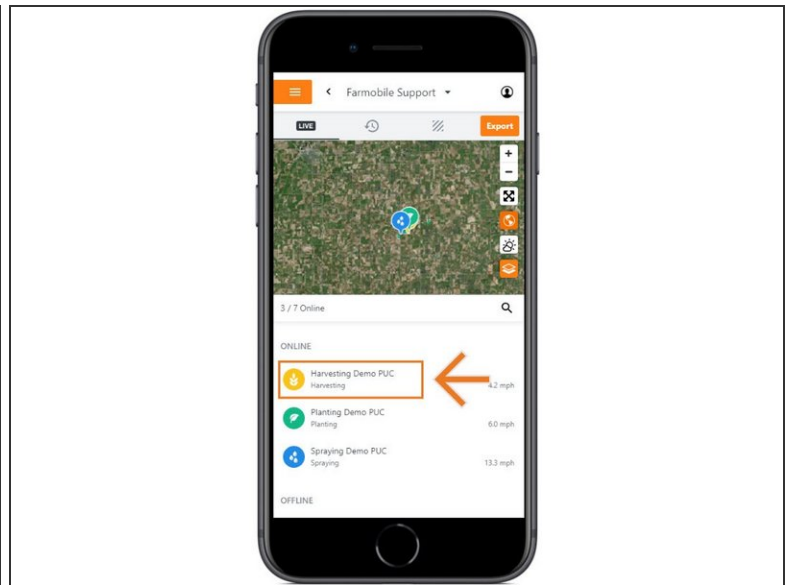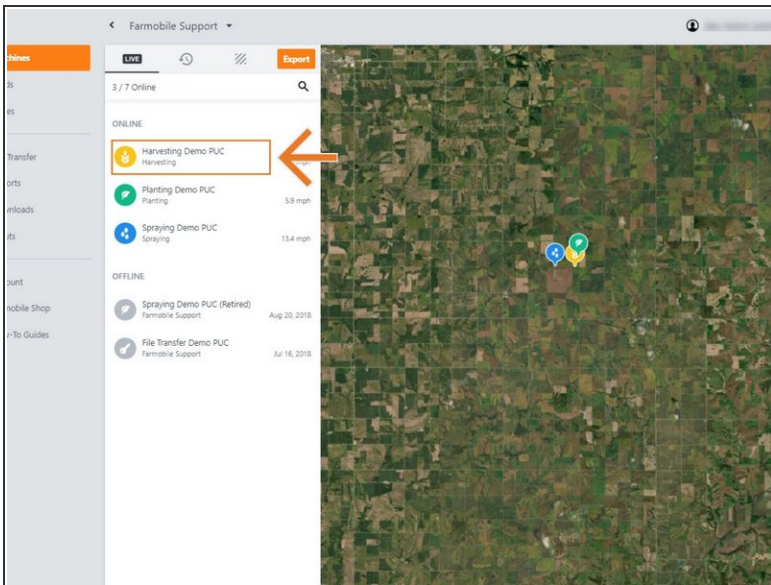


- Select a machine to open the Machine details page.

Step 3 — Select Edit

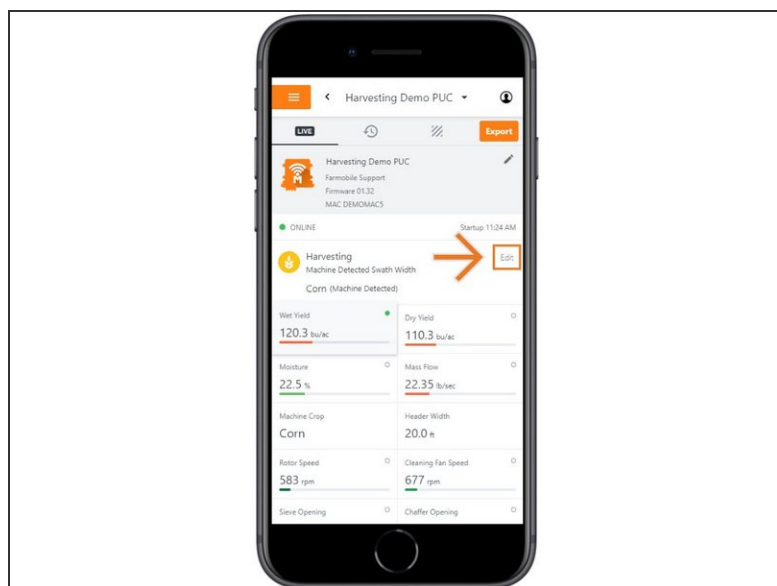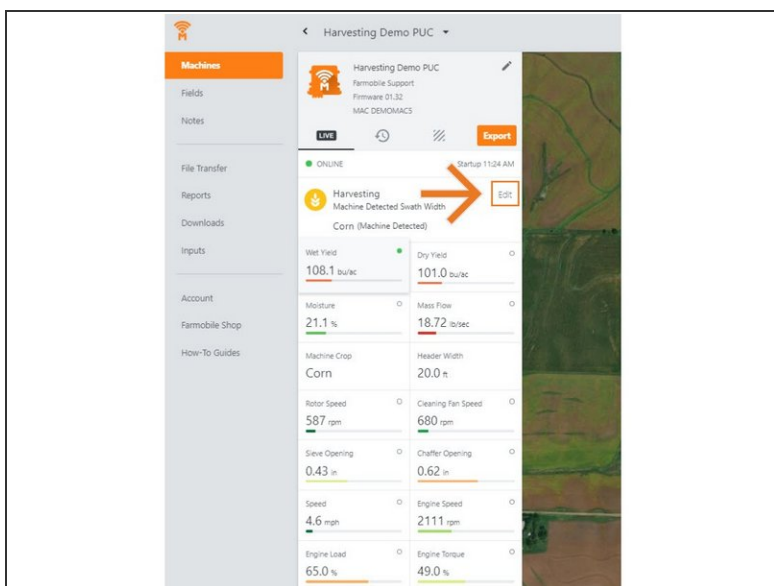

- Select edit to expand the adjustment options.
- The available options to adjust vary based on the current activity type.

Step 4 — Make Crop Type Adjustment and Save

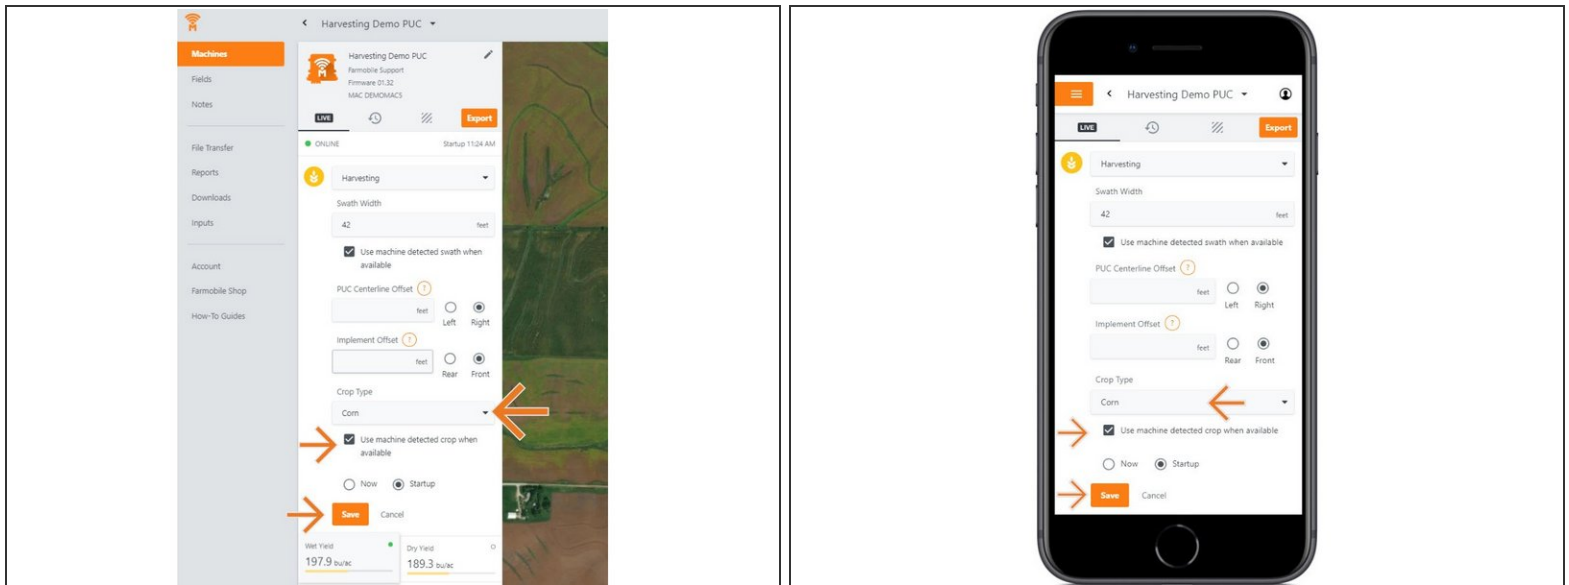

- Use the 'Crop Type' drop down menu to select a different crop type.
- Select 'Now' or 'Startup' to apply the adjustment at the correct time.
- For Forage and Harvest activities, 'Use Machine detected crop when available' is checked by default.
- Select 'Save' to make the adjustment.