



Crop Type

Written By: Support

Harvesting Demo PUC

Farmobile Support
Firmware 01.32
MAC DEMOMAC5

LIVE

Export

ONLINE Startup 11:24 AM

Harvesting

Swath Width

42 feet

☒ Use machine detected swath when available

PUC Centerline Offset ?

feet

Left Right

Implement Offset ?

feet

Rear Front

Crop Type

Corn

☒ Use machine detected crop when available



☐ Now ☒ Startup

Save Cancel

INTRODUCTION



- Live Machine Adjustments are only available at the Machine level.
- Crop Type Adjustments are only available for planting, forage, and harvest activities.
- Crop Type Adjustments carry forward to the end of the year or up to the next user-entered crop type adjustment.
 - Per 'Activity' type.
 - Per Farmobile PUC™ device
- When foraging or harvesting, you also have the ability to 'use machine detected crop type' if available.
 - By default this will be enabled.
 - If enabled and the machine provides a machine detected crop type, that crop type will be applied to your data.
 - If disabled, you must provide a user-defined crop type.

Step 1 — Select Machines from the Farmobile DataEngineSM Platform

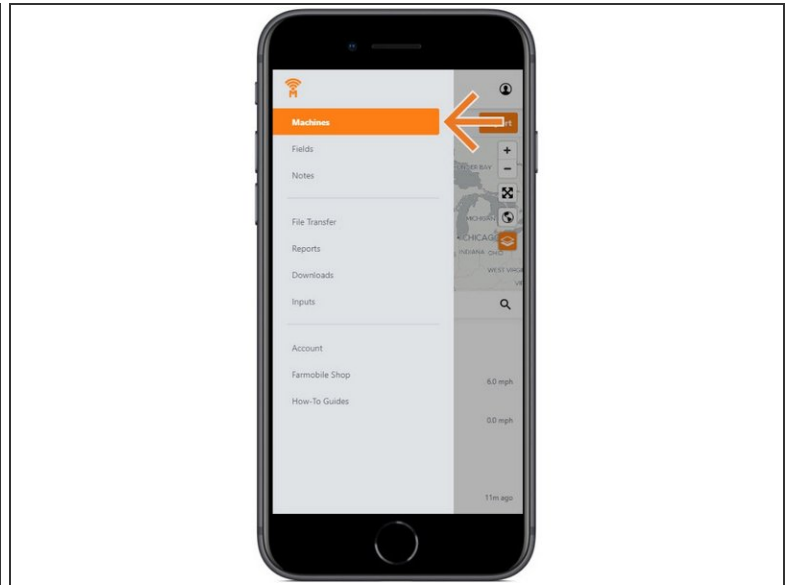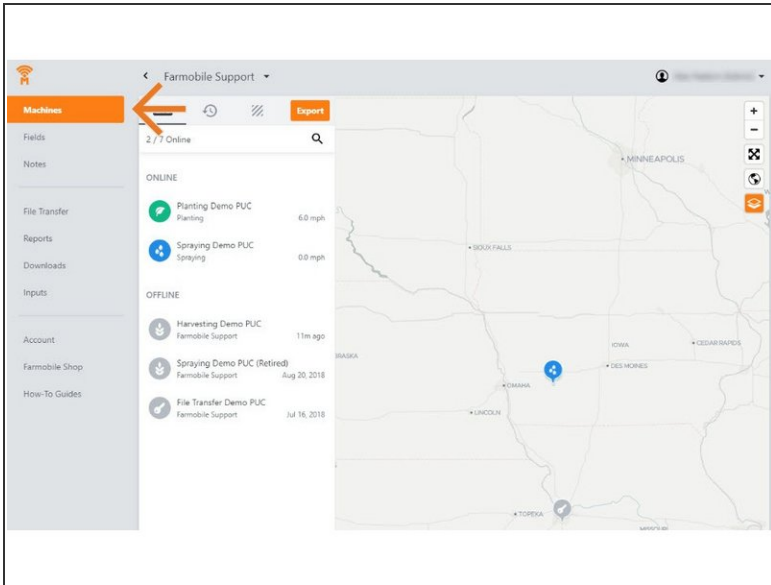



- Selecting Machines from the Farmobile DataEngine platform menu will open the Machines page with all of your Farmobile PUC device listed and displayed on the map.

Step 2 — Select a Machine

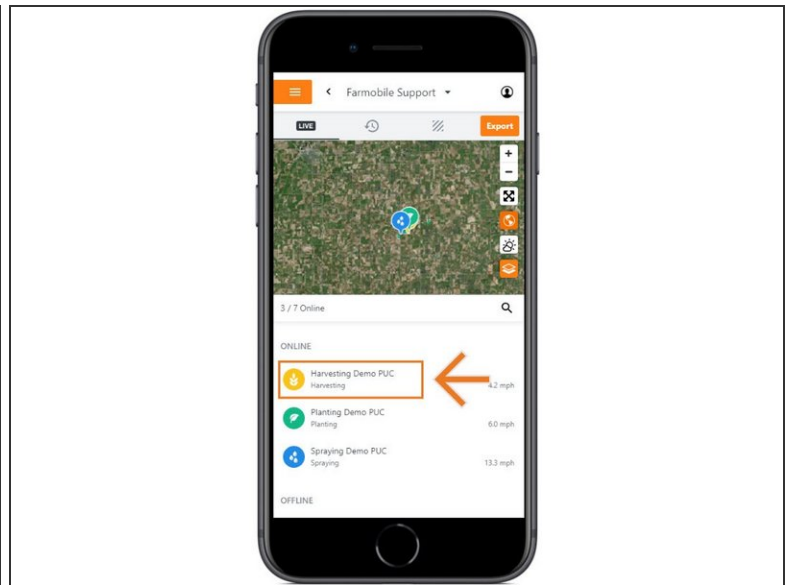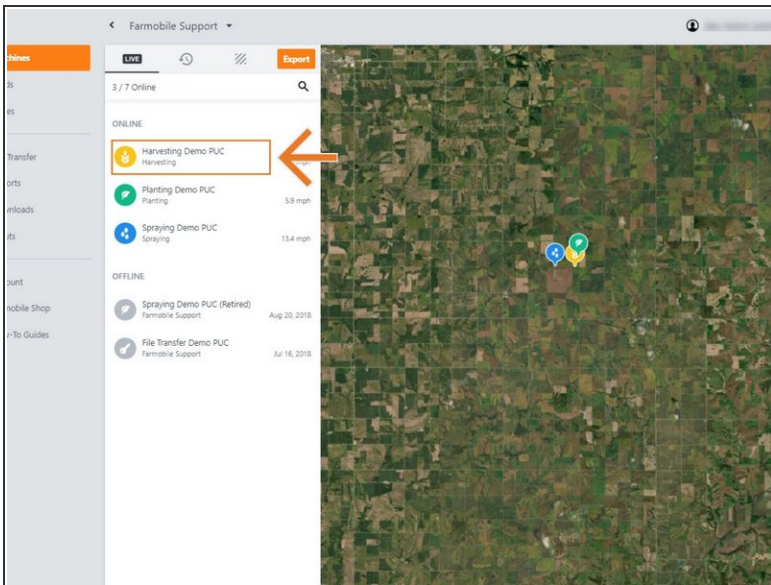


- Select a machine to open the Machine details page.

Step 3 — Select Edit

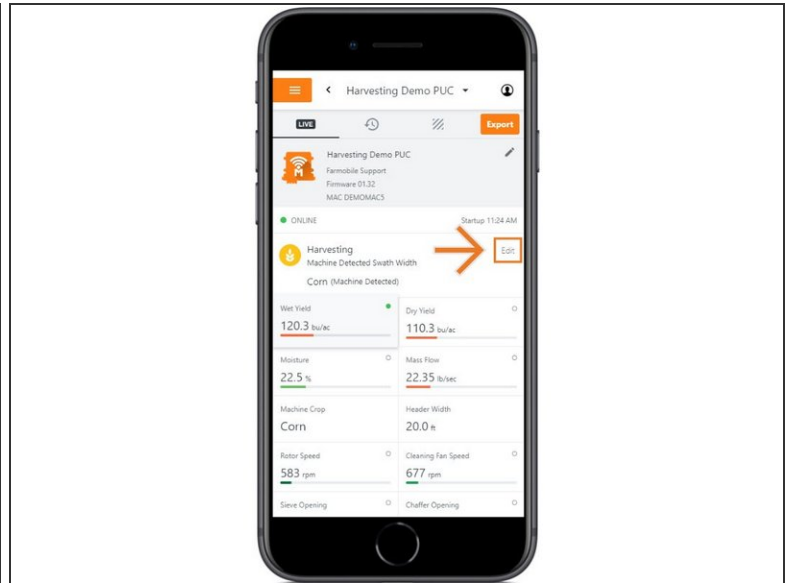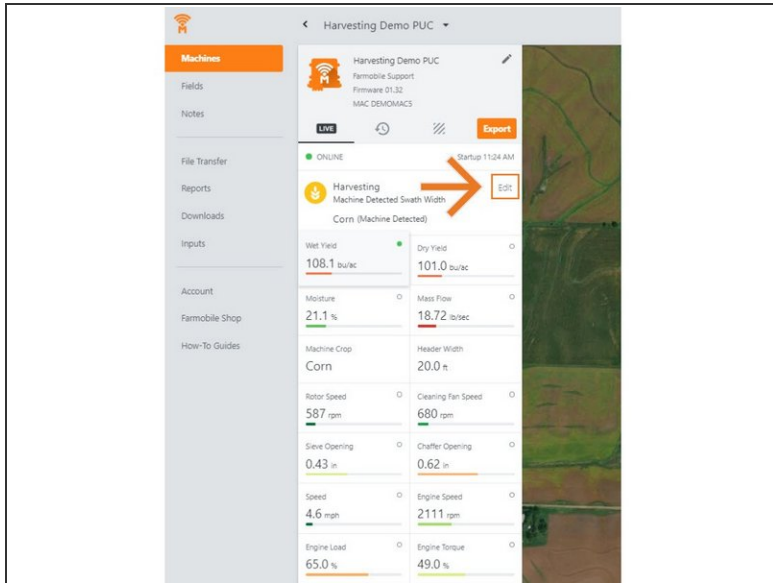

- Select edit to expand the adjustment options.
- The available options to adjust vary based on the current activity type.

Step 4 — Make Crop Type Adjustment and Save

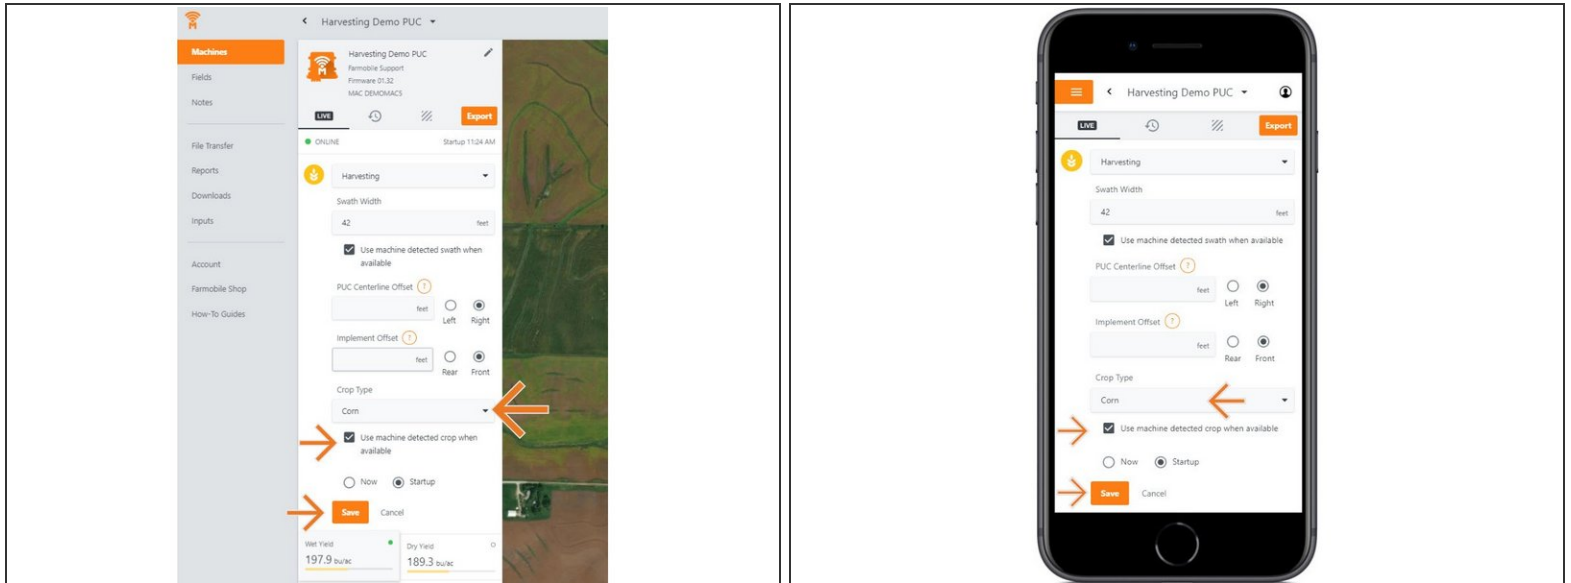

- Use the 'Crop Type' drop down menu to select a different crop type.
- Select 'Now' or 'Startup' to apply the adjustment at the correct time.
- For forage and harvest activities, 'Use Machine detected crop when available' is checked by default.
- Select 'Save' to make the adjustment.