



PUC Installation Guide

Written By: Support



INTRODUCTION

This is the proper installation of the PUC on a John Deere 4000 Series Sprayer.

Step 1 — Remove Contents from Box



- Make sure you have all necessary parts
- Note: You may have a different diagnostic cable.

Step 2 — Locate Diagnostic Port



- The diagnostic port is located on the right side of the cab.
- Near the window.

Step 3 — Plug Diagnostic Cable into Port




- Press cable down into the port.
- Twist the connector to the left right to secure cable to the port.

Step 4 — Antenna Prep



- Uncoil Antenna.
- Attach Velcro coin to the back of the antenna.

Step 5 — Locate Antenna Position on Cab

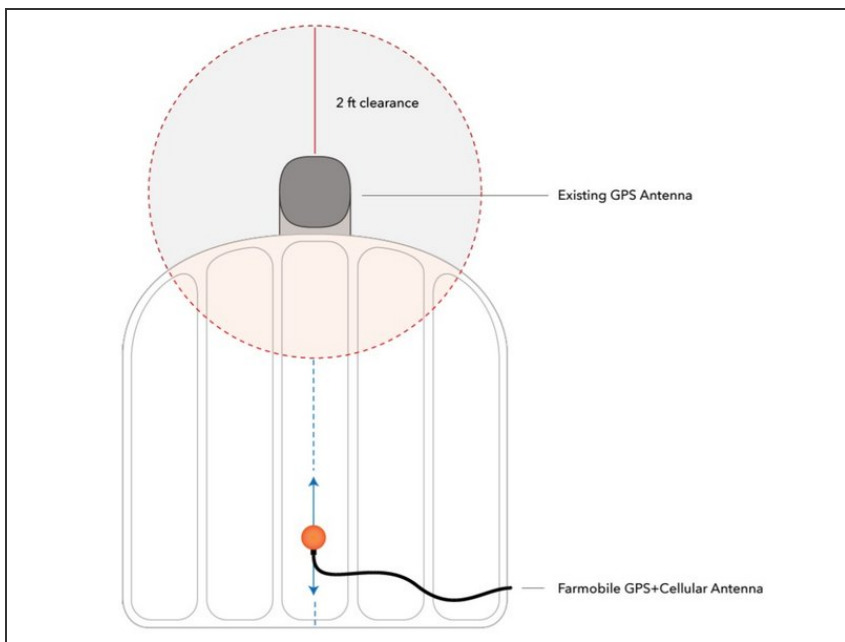

- Center and secure the antenna to the cab roof orange side facing up with a clear view of the sky.
- Keep the Farmobile antenna away from other antennas such as existing GPS antennas & CB radio antennas.
- A minimum distance of 2 feet is recommended.
- Maximize the distance between the Farmobile antenna and other GPS antennas.

Step 6 — Clean Cab at Antenna Attachment Point




- Use Wet Nap to clean attachment point of debris.

Step 7 — Attach Antenna to Cab



- Place opposing side of Velcro on clean spot of cab.
- Attach antenna to receiving piece of Velcro.
 - Press down firmly on antenna to ensure connection.

Step 8 — Attach Antenna Cord to Cab

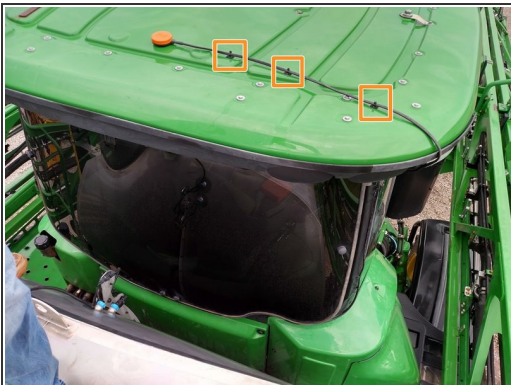

- Slide cable ties into mounts.
- Attach antenna to mounts with ties.
- Attach mounts to cab.

Step 9 — Run Antenna Cable into Cab



- Run the cable along the side of the cab using the anchors.
- Insert the cable through the notch in the back window of the cab.

Step 10 — Attach Antenna Cable and Diagnostic Cable to PUC



- Plug in the diagnostic cable to the open port on the left side of the PUC.
 - Twist connector down to ensure proper connection.
- Match antenna cable connectors colors with the receiving end on the PUC.
 - Plug connectors into PUC.

Step 11 — Turn on Machine



- The PUC will light up.
 - Both green and red lights will light up.
- The PUC will go through its startup procedure.
- The PUC starts collected data when the green light starts blinking.