

View Reports

Follow these quick steps to view your reports in DataEngine Live.


Written By: Support

hines	_						
is	T FILTER REPORTS	REF	REPORT		(3 Downloa	ad PDF
	REPORT TYPES						
Transfer	Field Activity Machine Utilization	. (J	Utilization Summary			Apr 01 - Apr 30, 201	
orts	Machine Utilization Summary						
nloads	REPORT VARIANTS	(J				10	
	Daily	-		4 / 8 MACHINES	29.7 mi TRAVELED		1.6 ac
5	Weekly	-		05:10:28	38.6 gal	7.5	i gal/h
182	Monthly	-		RUN TIME	FUEL USED		LRATE
unt		(+					
obile Shop		(+	Idling	00:36:26	11.7%	-	1.2 gal
		C	Transporting	00:52:28	16.9%	7.2 mi	5.8 gal
		¢	Headland Turning	00:23:31	7.6%	1.6 mi	2.5 gal
		G	Working	03:18:03	63.8%	131.6 ac	29.1 gal
		Ŧ	30.5% Harvesting	01:00:24		13.5 ac	11.9 gal
		(+	28.7% Planting	00:56:54		36.2 ac	6.9 gal
		C	23.7% Spraying	00:46:51		65.9 ac	6.8 gal
		(+	17.1% Planting/Spraying	g 00:33:54		16.0 ac	3.5 gal
			Total Run Time	05:10:28			

INTRODUCTION


- Machine Reports are automatically generated based on machine activity.
- All users receive Daily, Weekly, and Monthly machine utilization reports.

Step 1 — Select Reports from the Farmobile DataEngine[™] Menu

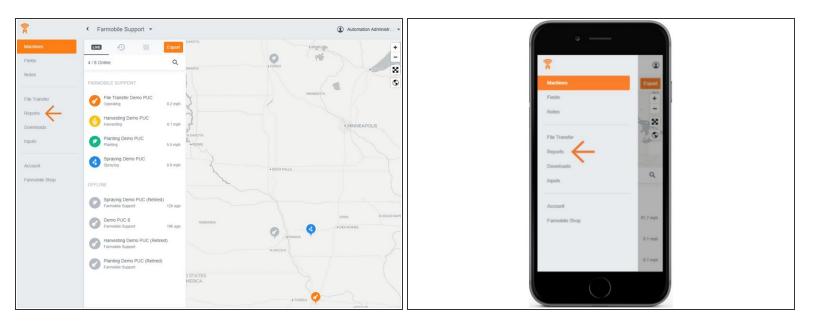


 Selecting Reports from the Farmobile DataEngine menu will open the Reports page with all of your reports listed to review.

Step 2 — Select the Report Name to View the Report

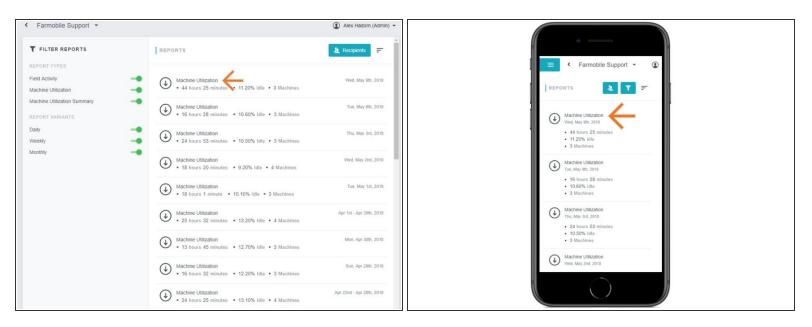

The name of each report is a hyperlink to view your report details.

Step 3 — Review Report Details

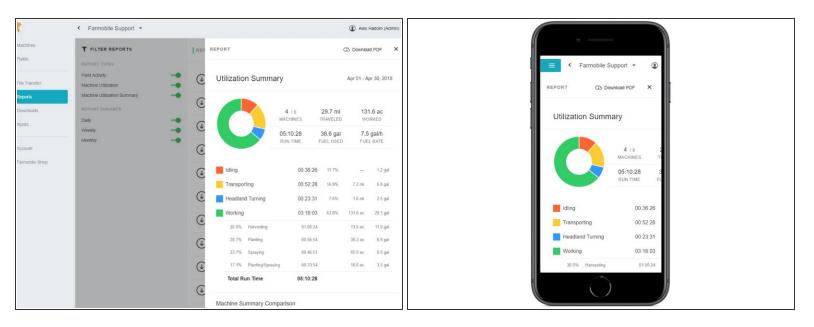

- Once your report is open, you can review all the details to assist in managing your operation.
- You also have the ability to 'Download' a report from this page as well to share with an advisor. For assistance on how to download a report, please refer to the Download Report guide.