 




Daily Machine Activity

Export your point-by-point Daily Machine Activity in a CSV, Shapefile, or GeoJSON to view in a different system or share with your trusted advisors.

 
 
Written By: Support

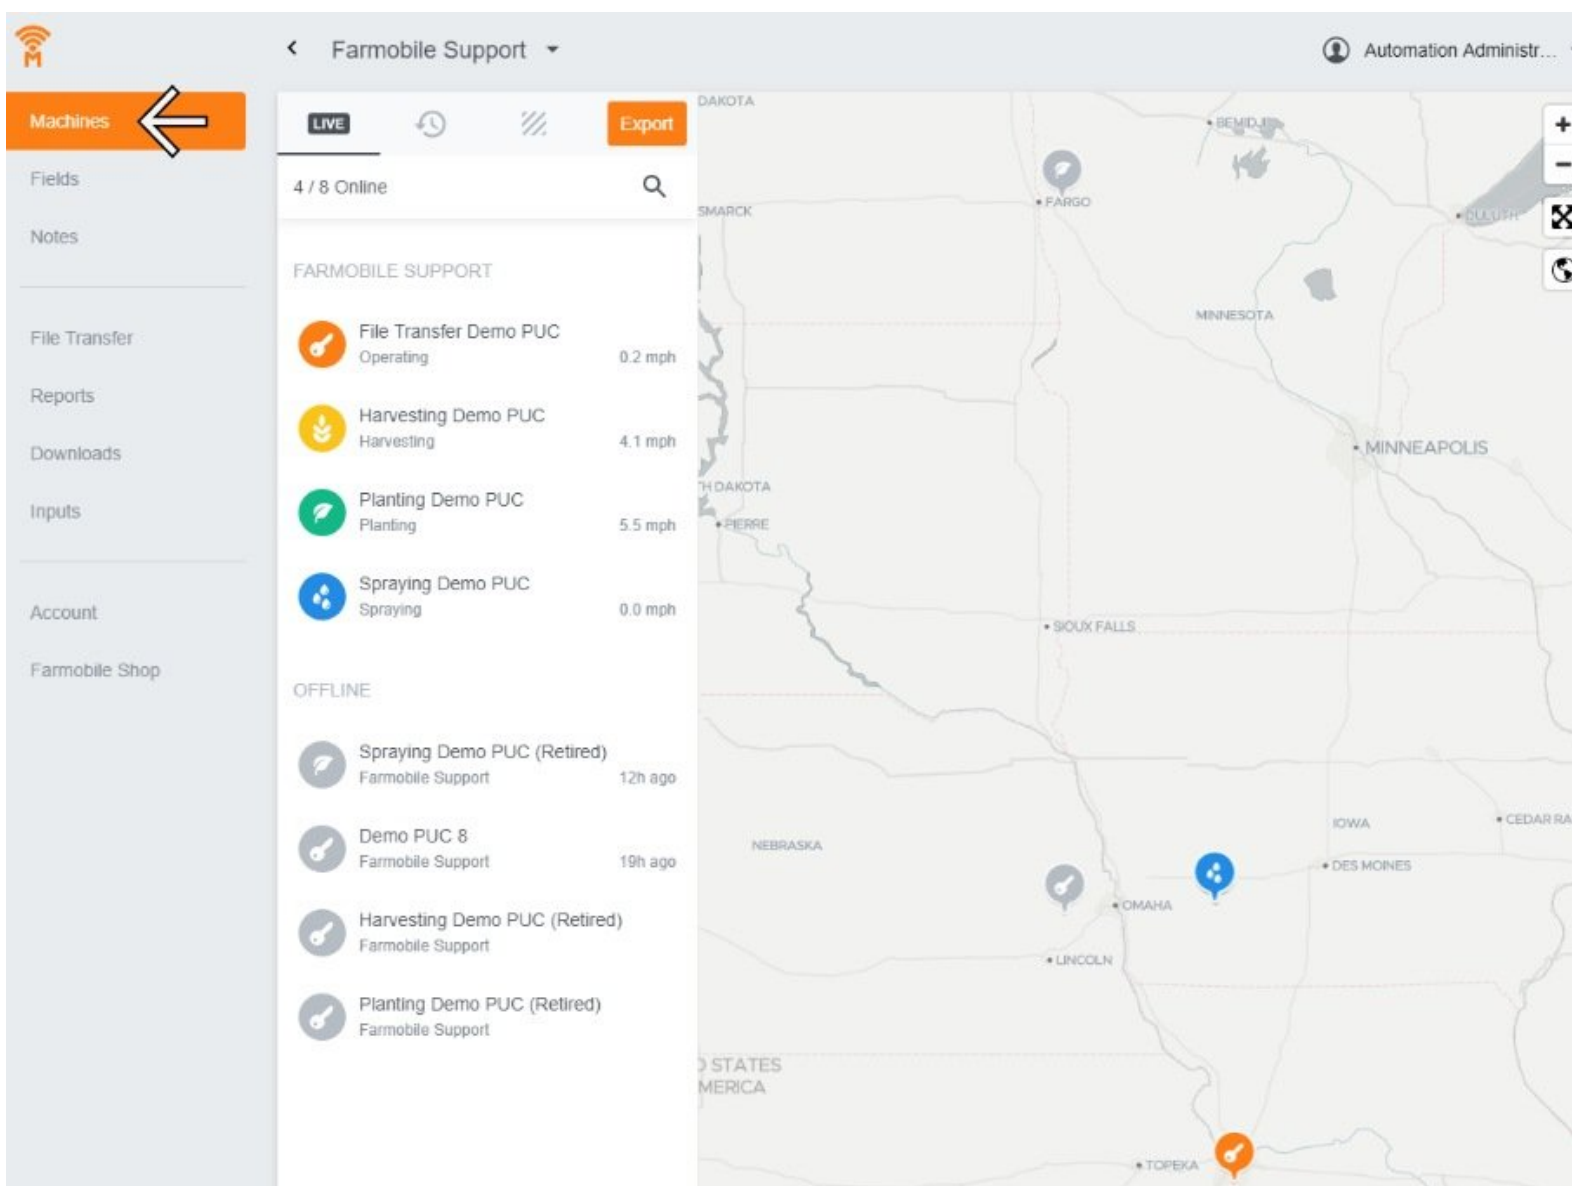

INTRODUCTION



- Provides daily point-by-point machine data within the requested date range.
- Date Range can be one or more days.
- Exporting from the Grower Level, will deliver data for all of your Farmobile PUC™ device that had Machine Activity within the requested date range.
- Exporting from a selected Machine, will deliver data for only the selected Farmobile PUC device within the requested date range.
- All point-by-point exports follow these steps:
 - Request Export: Farmobile will begin processing the request and email you once ready.
 - Recieve Email: Farmobile will email you once the download is available. The link will take you to the download page of Farmobile DataEngineSM platform.
 - Download File: Your requested data will be listed on the Download.

Step 1 — Select Machines from the Farmobile DataEngineSM Platform

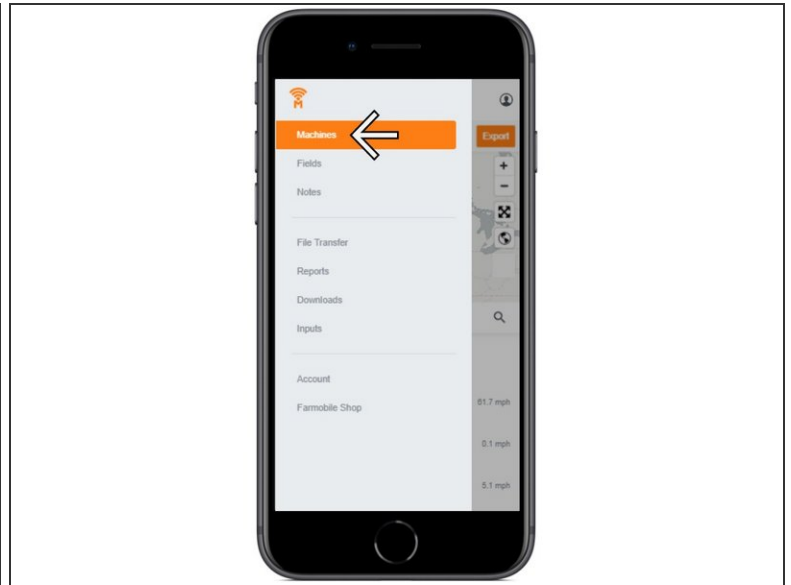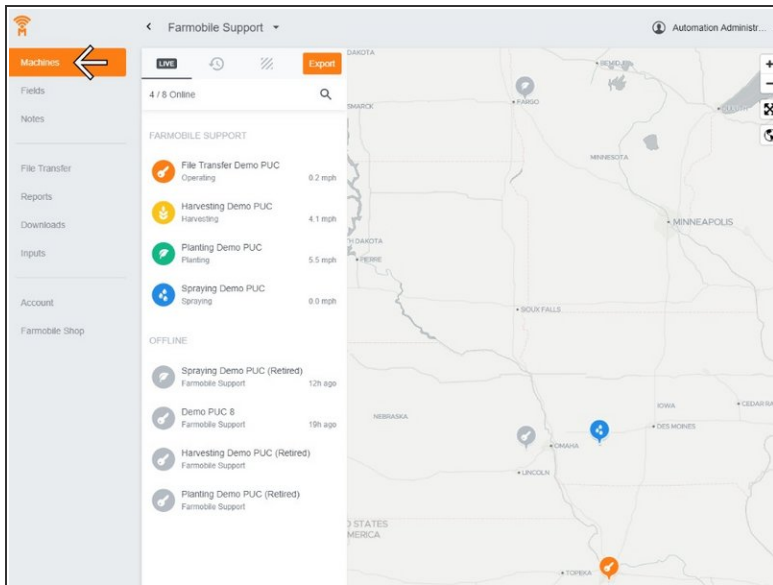


- Selecting Machines from the Farmobile DataEngine platform menu will open the Machines page with all of your Farmobile PUCTM device listed and displayed on the map.

  Step 2 — Select Export

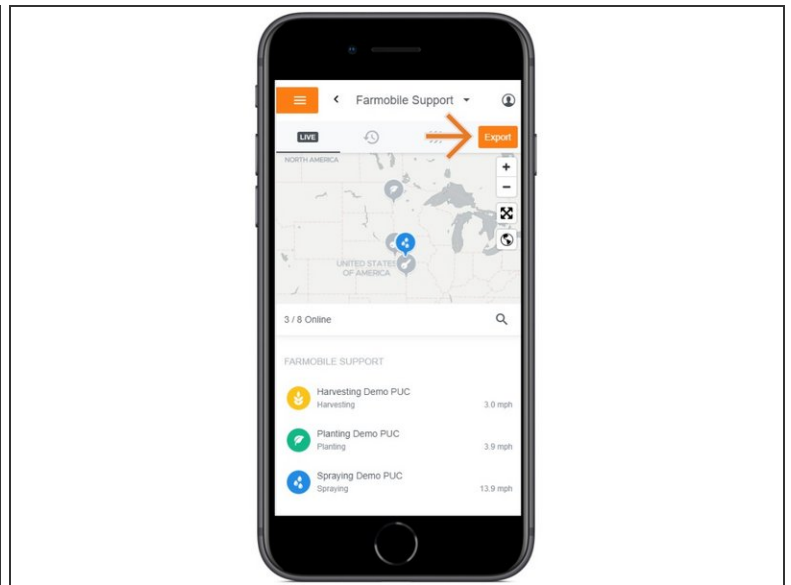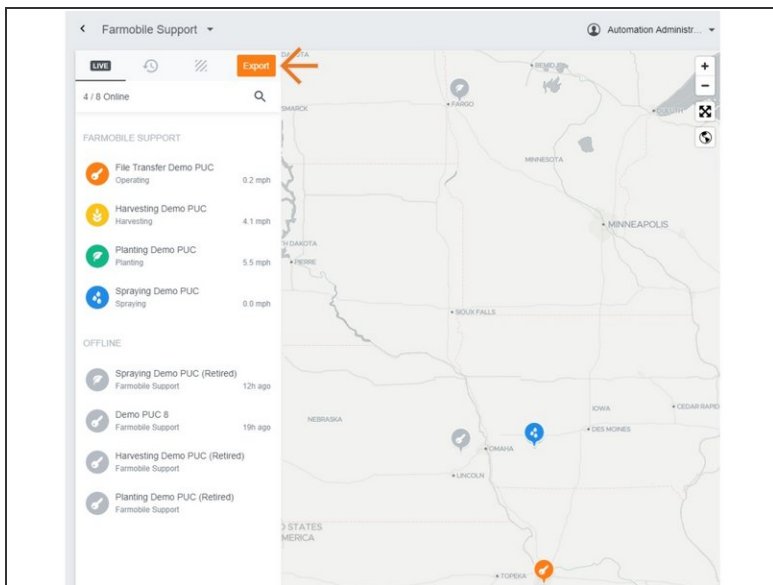


- Selecting Export will open the Export Machine Data window.

 Step 3 — Enter Details and Select Export

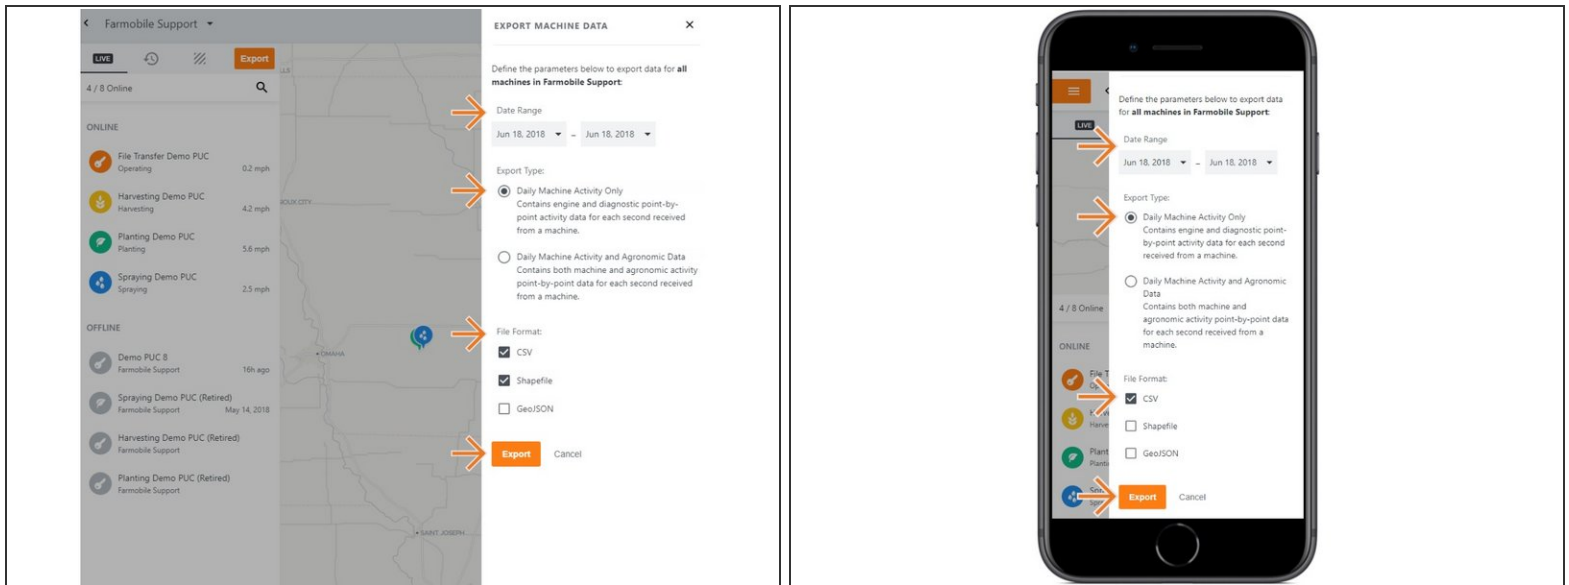


- Populate the date range, you can select a single day or multiple days.
- Select Daily Machine Activity Only in the export type section.
- Check the box for each file format you want to export.
- Each file format requested will be delivered in separate compressed zip files.
- Select Export to request your data.
- Once the data is ready, you'll receive an email from Farmobile.

 Step 4 — Receive Email Notification

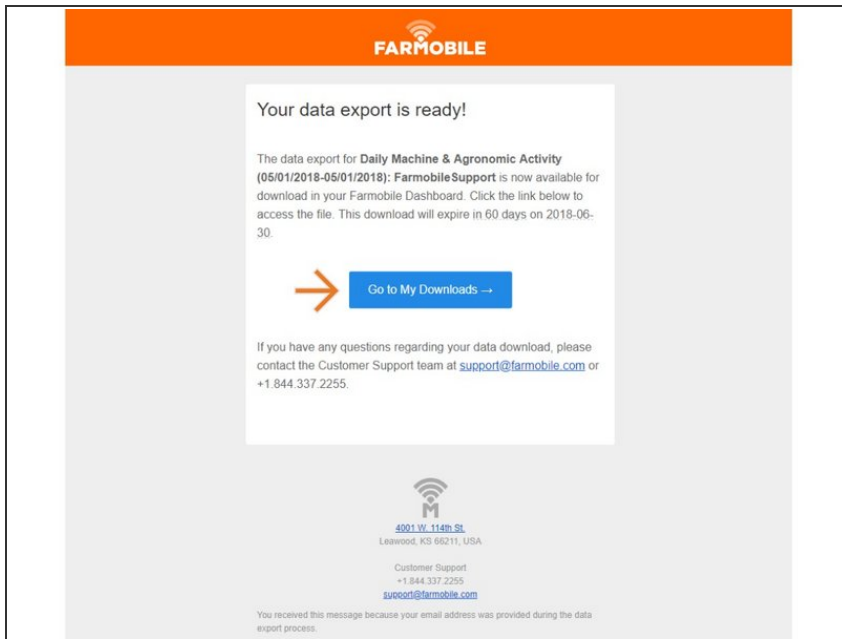

- Once the point-by-point data is ready, Farmobile will send you an email with the requested file name listed and a link to the Farmobile DataEngine platform download page.
- At this point, you can select download for the requested file

 Step 5 — Download the File

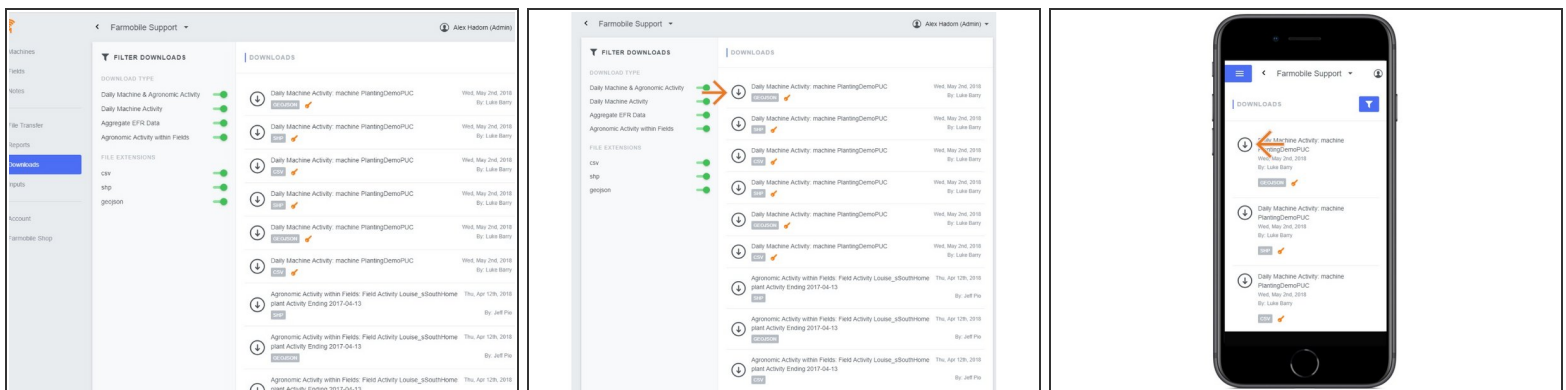

- Your file is listed in the Downloads page of Farmobile DataEngine platform.
- The list is sorted by date requested, so your most recent exports are listed at the top.
- Select Download to download the zip file.