



Update Activity Type

This guide will walk you through the steps required to make a live machine activity adjustment.


Written By: Support

The screenshot shows the Farmobile web application interface. On the left is a sidebar with navigation links: Dashboard, Machines (highlighted in orange), Fields, Notes, Farmobile Index (Beta), File Transfer, Data Import, Reports, Downloads, Inputs, Account, Farmobile Shop, and How-To Guides. The main content area is titled "Clear Version 1000" and shows a machine's status as "ONLINE" with a "Startup 8:36 AM" timestamp. A dropdown menu is open, displaying a list of activity types: Operating, Planting, Spraying, Spreading (highlighted in blue), Harvesting, Foraging, Baling, Tillage, and Operating. Below the list are radio buttons for "Now" and "Startup", and "Save" and "Cancel" buttons. The background features a map with a green line representing the machine's path and a speedometer at the bottom labeled "Speed - mph" with a scale from 0 to 70.

INTRODUCTION


- Live Machine Adjustments are only available at the Machine level.
- Activity Adjustments carry forward to the end of the day.
 - Per Farmobile PUC™ device.
- The type of Activity Adjustment you can make depends on the current activity type:
 - Planting
 - Harvest
 - Spreading
 - Spraying

Step 1 — Select Machines from the Farmobile DataEngineSM Platform

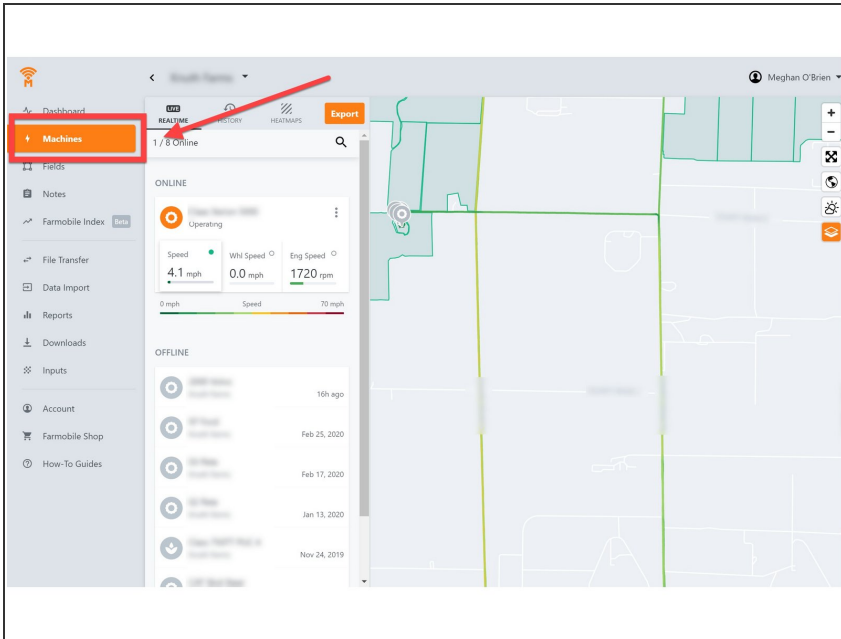


- Selecting Machines from the Farmobile DataEngine platform menu will open the Machines page with all of your Farmobile PUC device listed and displayed on the map.

Step 2 — Select a Machine

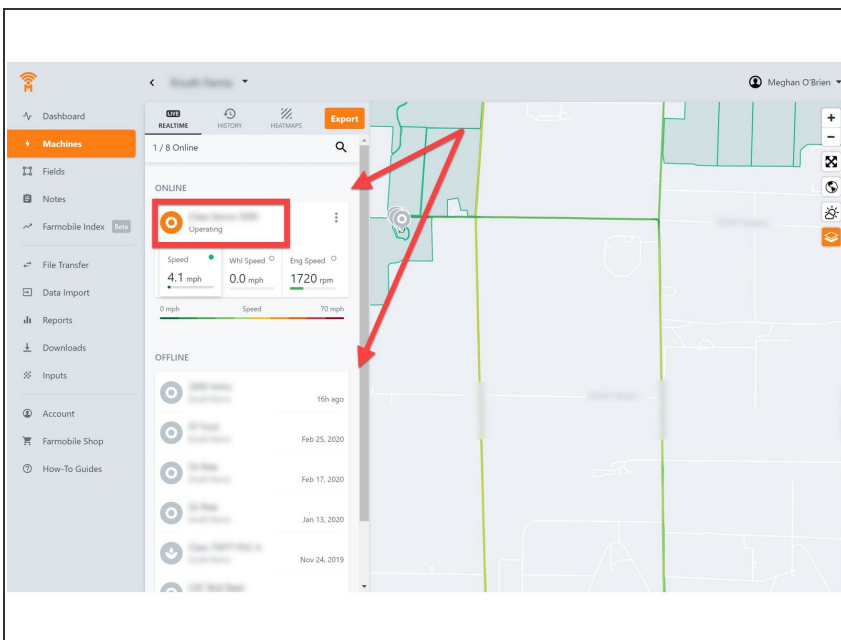


- Select a machine to open the Machine details page.

Step 3 — Select Edit

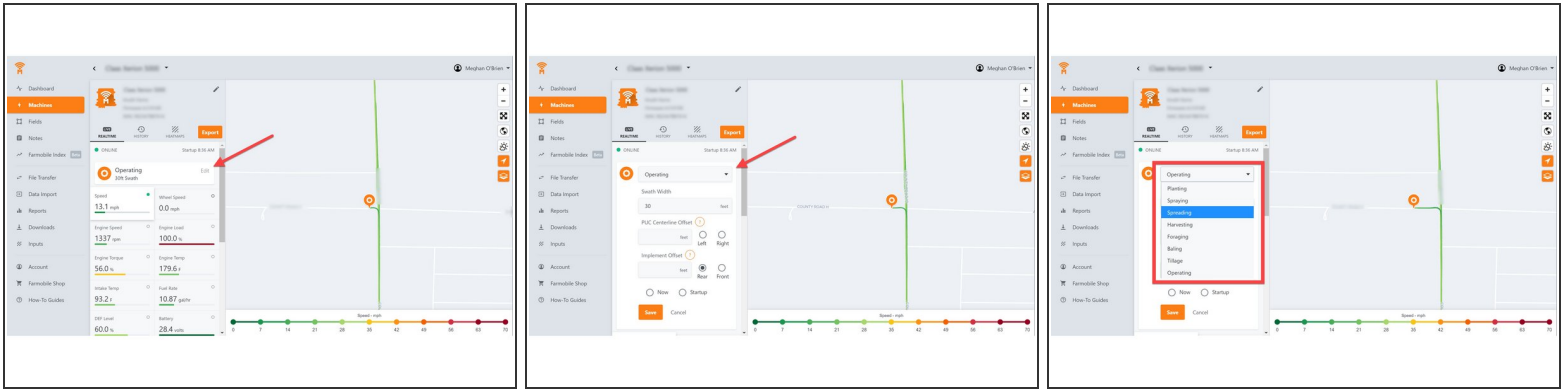

- Select edit to expand the adjustment options.
- The available options to adjust vary based on the current activity type.

Step 4 — Make Activity Adjustment

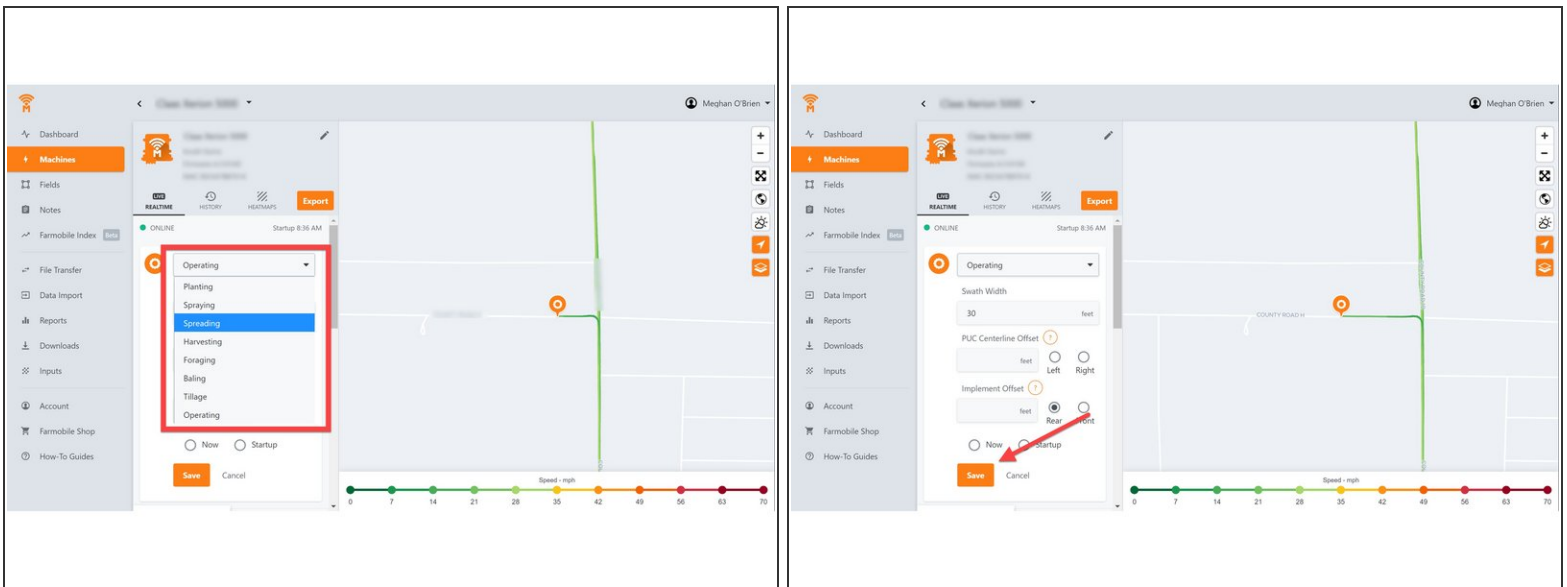

- Click the 'Activity' drop down menu, and select a different activity type.
- Select 'Now' or 'Startup' to apply the adjustment at the correct time.
- Select 'Save'.
- The live screen and machine activity label will update and display the new activity type.