 




# Adjust Swath Width

 

Written By: Support

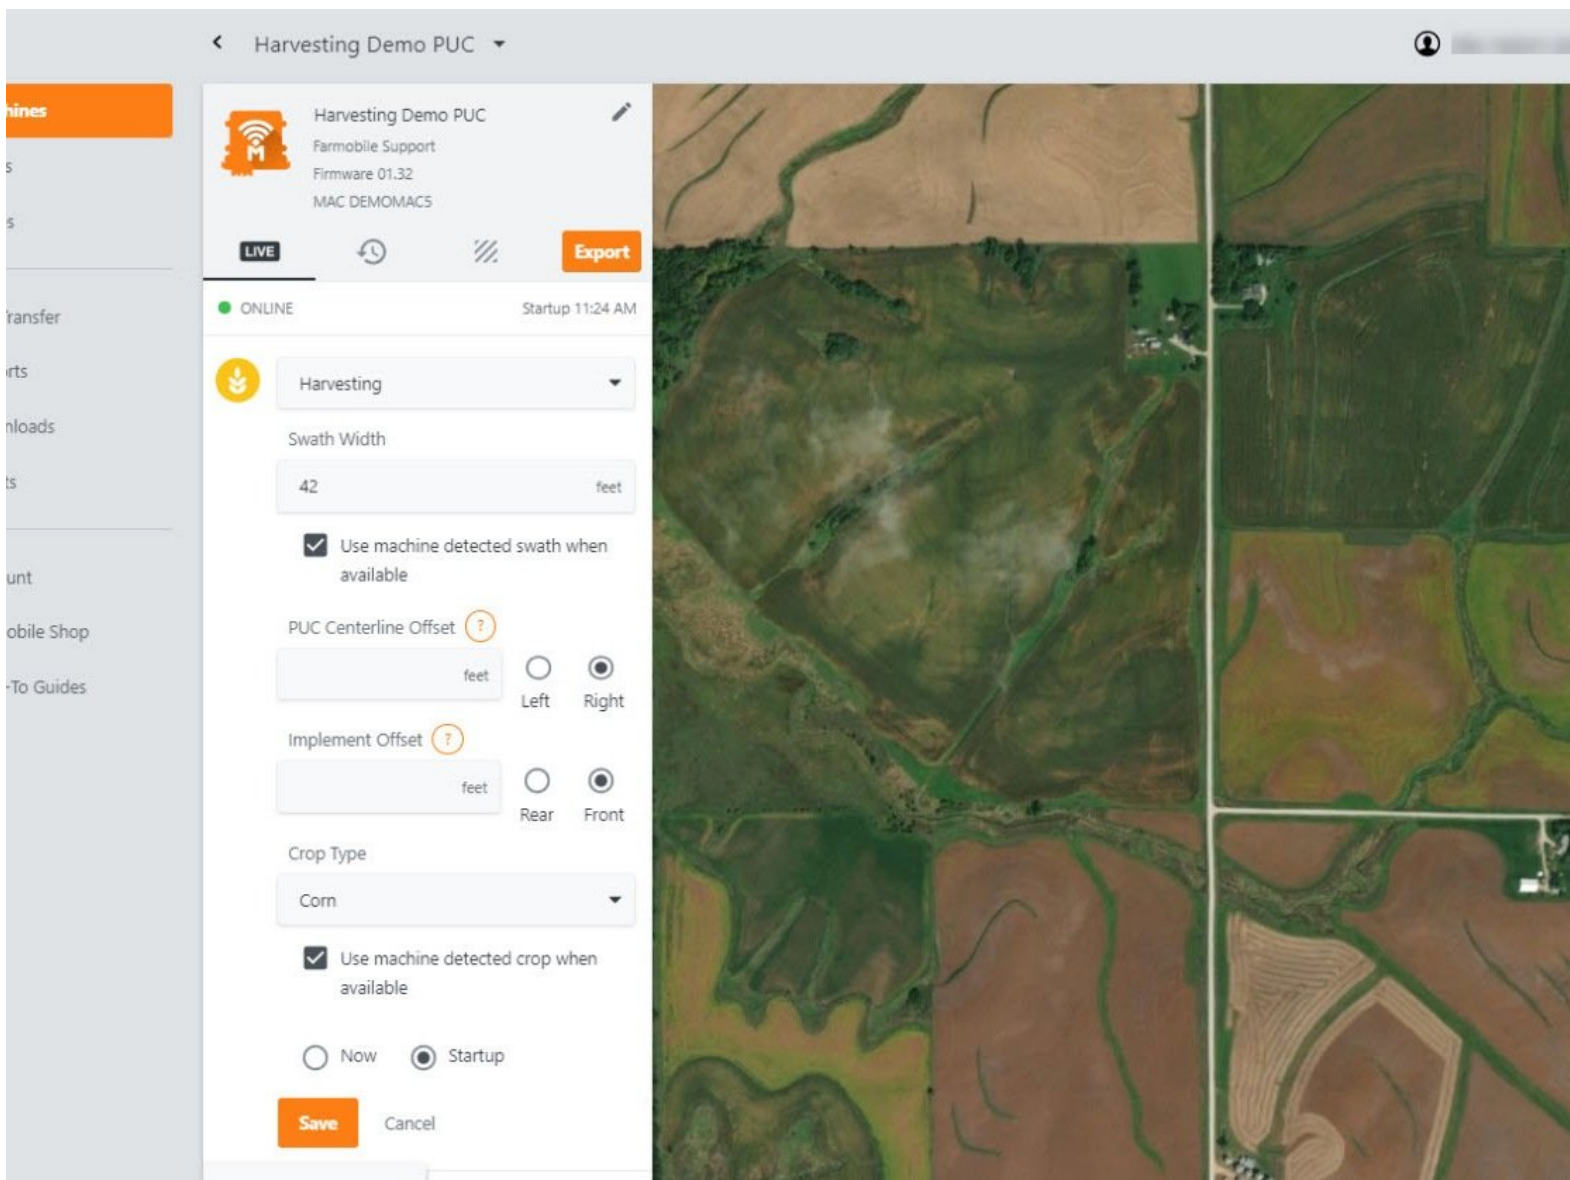

## INTRODUCTION



- Live Machine Adjustments are only available at the Machine level.
- Swath Width adjustments are available for all activity types.
- Swath Width Adjustments carry forward to the end of the year or up to the next user-entered swath width adjustment.
  - Per 'Activity' type.
  - Per Farmobile PUC™ device.
- When foraging or harvesting, you also have the ability to 'use machine detected swath width' if available.
  - By default this will be enabled.
  - If enabled and the machine provides a machine detected swath width, that swath width will be applied to your data.
  - If disabled, you must provide a user-defined swath width.

## Step 1 — Select Machines from the Farmobile DataEngine<sup>SM</sup> Platform

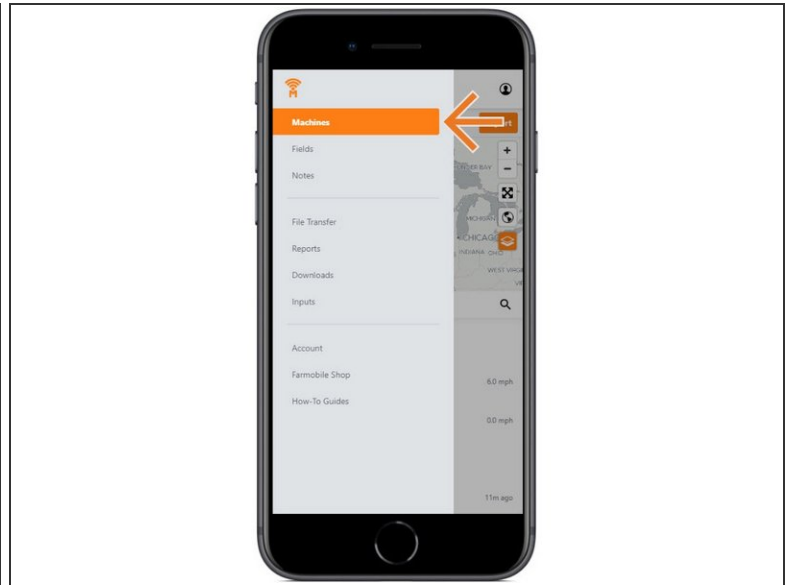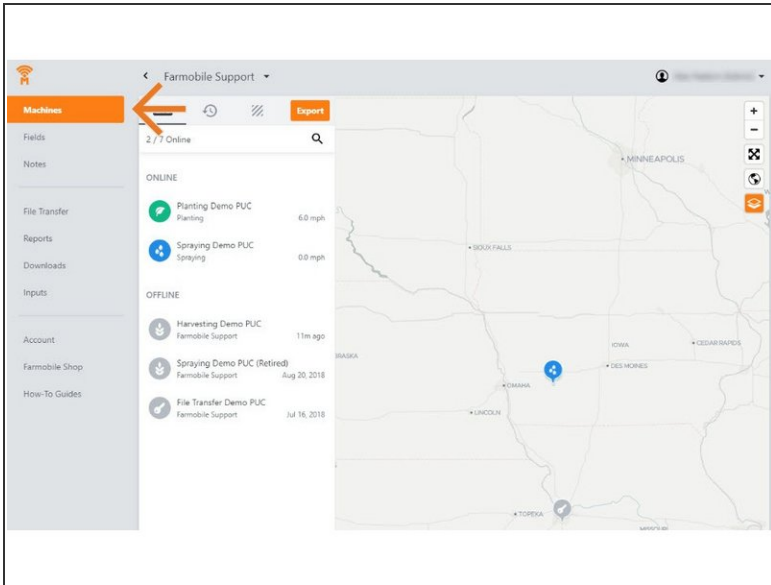



- Selecting Machines from the Farmobile DataEngine platform menu will open the Machines page with all of your Farmobile PUC device listed and displayed on the map.

## Step 2 — Select a Machine

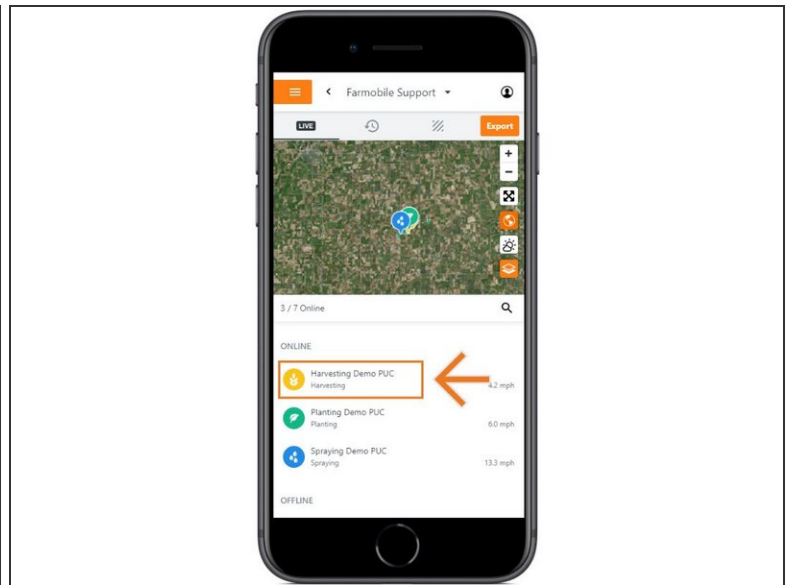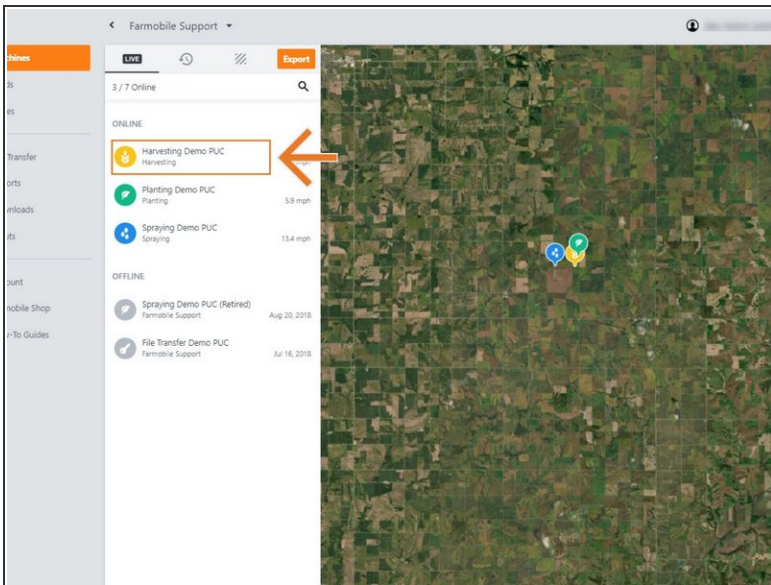 

- Select a machine to open the Machine details page.

## Step 3 — Select Edit

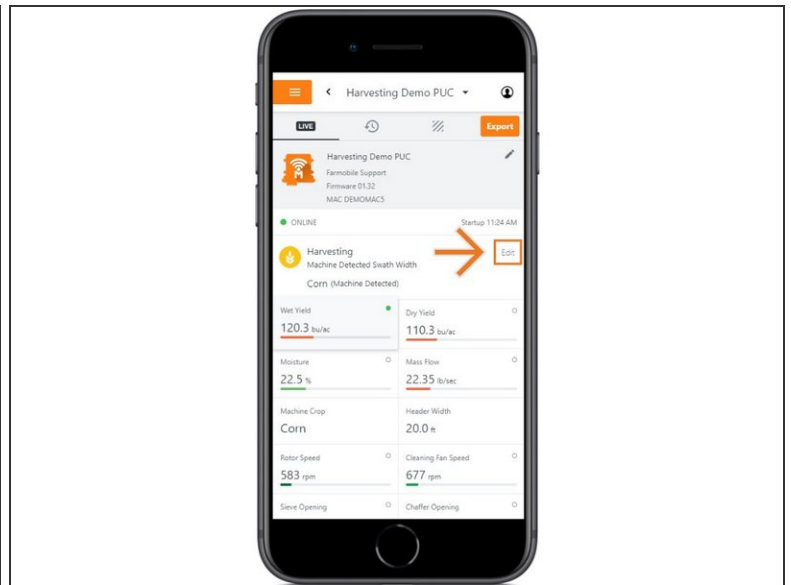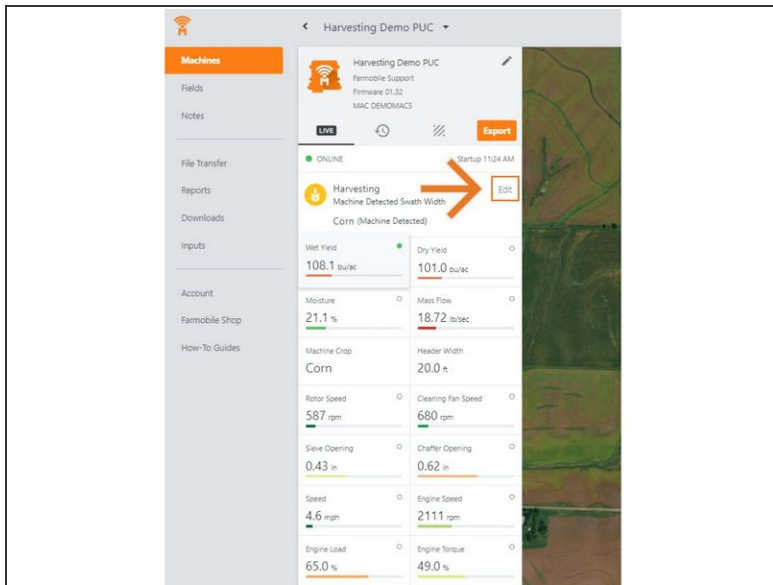  

- Select edit to expand the adjustment options.
- The available options to adjust vary based on the current activity type.

## Step 4 — Make Swath Width Adjustment



- Use the 'Swath Width' text box to enter the correct swath width value in feet.
- Select 'Now' or 'Startup' to apply the adjustment at the correct time.
- For forage and harvest activities, 'Use Machine detected swath when available' is checked by default.
- Select 'Save' to make the adjustment.