


Delete File or Folder

Delete a File or Folder listed on the Farmobile PUC™ device from the Farmobile DataEngine™ platform.


Written By: Support

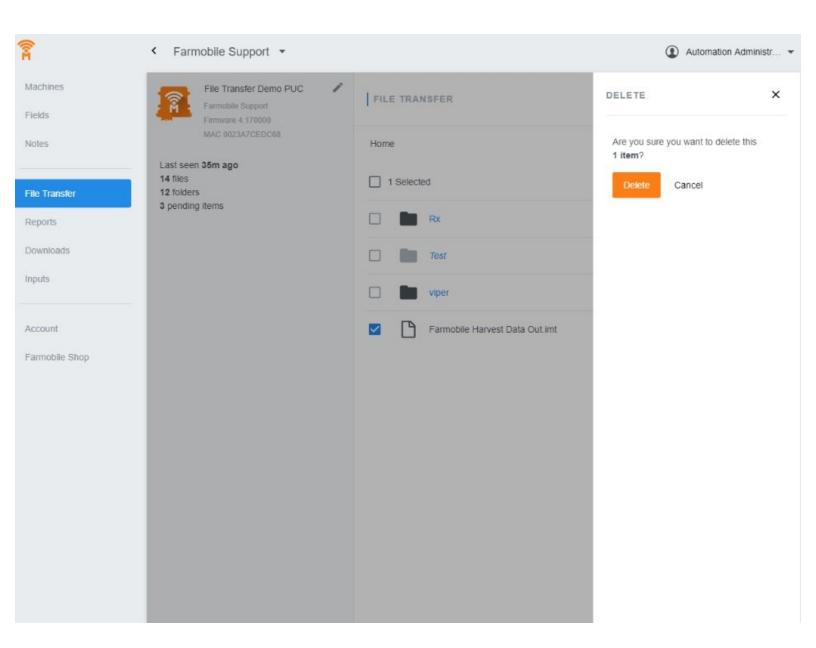

INTRODUCTION


- The user has the ability to 'Delete' files or folders from the Farmobile PUC™ device.
- Checking the box for a 'File' or 'Folder' updates the action buttons to enable 'Delete'.
- When deleting a 'Folder', all contents within the folder are deleted.

Step 1 — Select File Transfer from the Farmobile DataEngine™ Platform

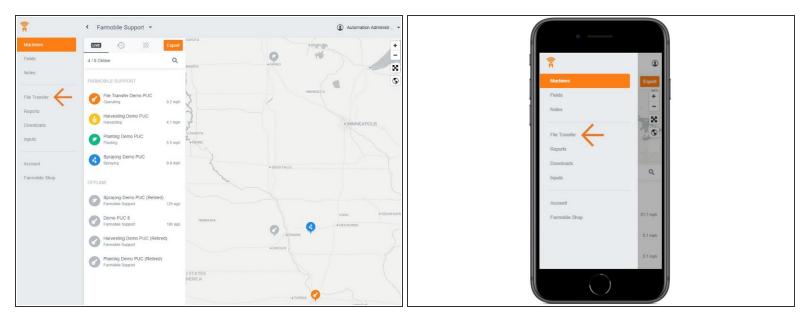


 Selecting File Transfer from the Farmobile DataEngine platform menu will open the File Transfer page with all of your Farmobile PUC devices listed.

Step 2 — Select a Farmobile PUC Device

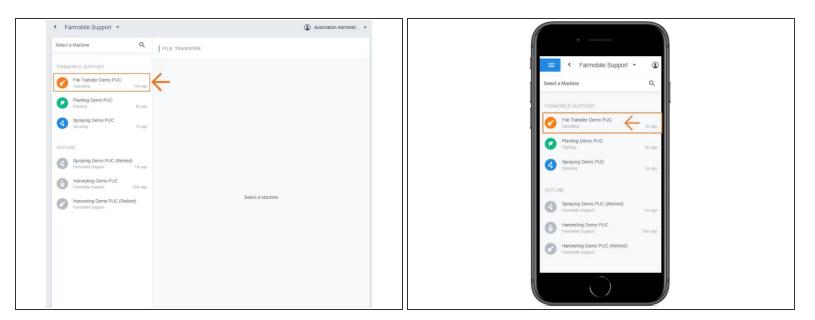

• From the list of Farmobile PUC devices, select the device to delete a file or folder from.


Step 3 — Select a File or Folder and Delete

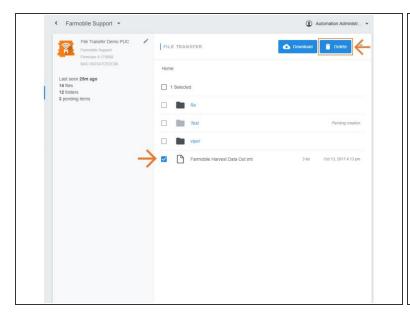




- Check the box for the file or folder you need to delete.
- The 'New Folder' button will update to the 'Delete' button
- Select 'Delete' to open the delete confirmation window.
- Deleting a folder will delete all the sub-contents as well.

Step 4 — Confirm and Delete

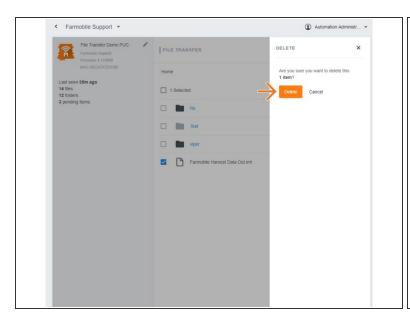

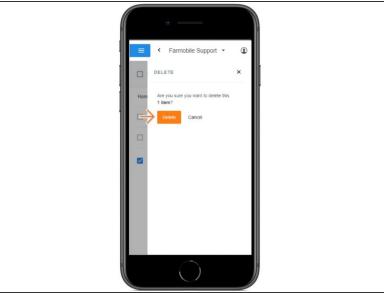

- Confirm that you want to delete the selected file or folder.
- Select 'Delete' to remove the file or folder from the Farmobile PUC device.