



# Antenna Installation

Every PUC Kit includes a custom antenna. This antenna provides connectivity for both GPS and Cellular radio signals. For top performance install the antenna according to the following guidelines.

Written By: Support




## Step 1 — Antenna Prep



- Uncoil Antenna
- Attach Velcro coin on back of Antenna

## Step 2 — Locate Antenna Position on Cab

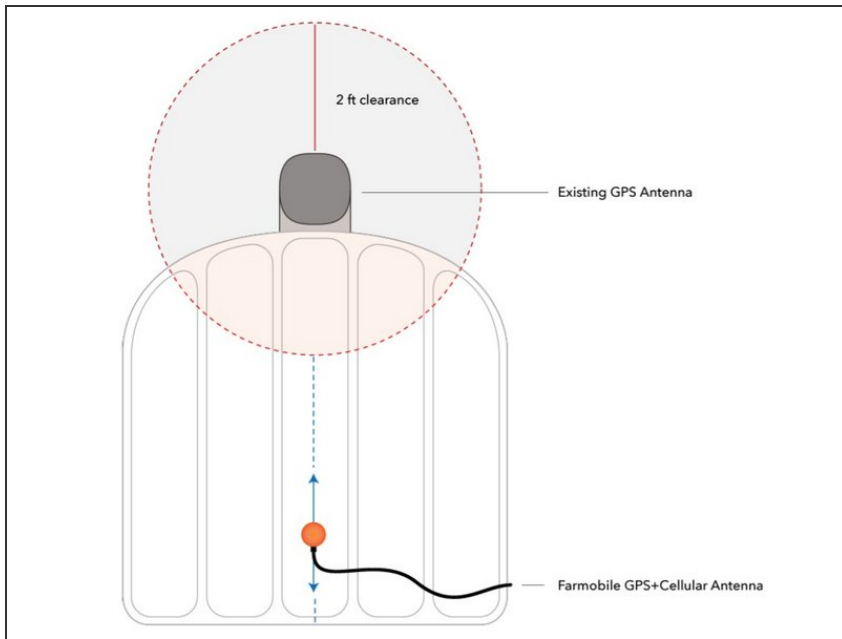

- Center and secure the antenna to the cab roof orange side facing up with a clear view of the sky.
- Keep the Farmobile antenna away from other antennas such as existing GPS antennas & CB radio antennas.
- A minimum distance of 2 feet is recommended
- Maximize the distance between the Farmobile antenna and other GPS antennas

## Step 3 — Clean Cab at Antenna Attachment Point





- Use Wet Nap to clean attachment point of debris

## Step 4 — Attach Antenna to Cab



- Place opposing side of velcro on clean spot of cab
- Attach Antenna to receiving piece of velcro
- Press down firmly on antenna to ensure connection

## Step 5 — Attach Antenna Cord to Cab

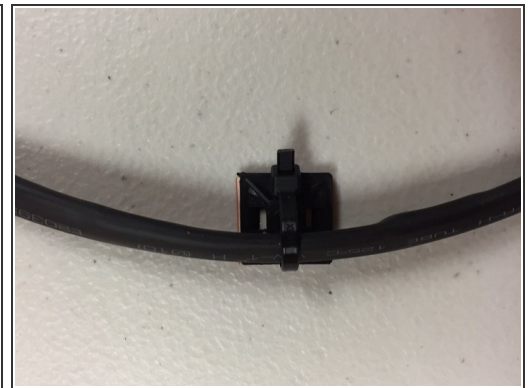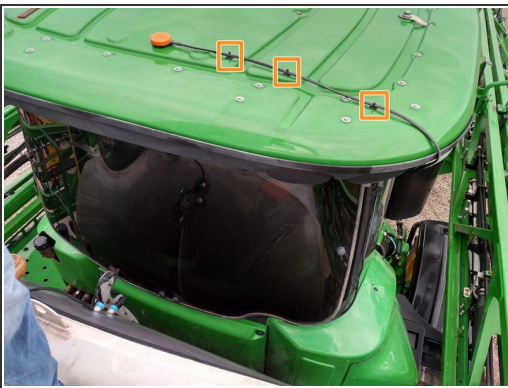

- Slide cable ties into mounts
- Attach antenna cable to mounts with ties
- Attach mounts to cab




## Step 6 — Run Antenna Cable into Cab



- Run the cable along the side of the cab using the anchors.
- Check for a small hole or cable entry point in the cab.
- Insert the cable into the cab.

## Step 7 — Attach Antenna to PUC

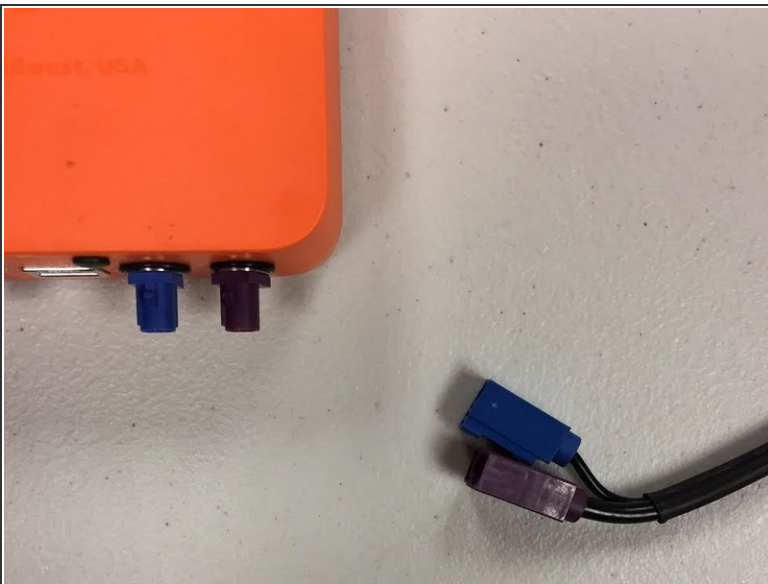

- Match connector colors and attach